

Heating element for HAKKO FR-810

No. A5005 (100, 110V) No. A5006 (120, 127V)

No. A5007 (220~240V) No. B5045 (Pipe)

⚠ WARNING


- When replacing the heating element, be sure to unplug the power cord.
- Wait for the hanpiece to cool before working.

How to replace the heating element


1. Remove the 4 screws that attach the heater pipe to the handpiece. Remove the heater pipe.



2. Remove the mica, heat insulation fiber and insulation ring in the heater pipe.

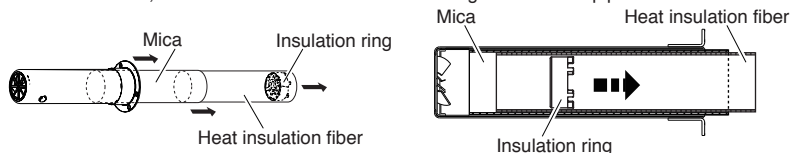

 3. Insert the new mica and heat insulation fiber to the heater pipe.

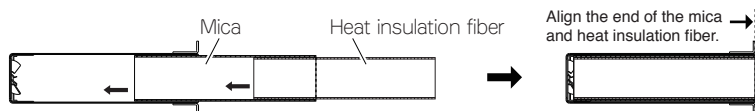

4. Disconnect and remove the heating element.



⚠ CAUTION

Handle the heating element with care. Never touch the heating element wire!

5. Insert a new heating element and attach the insulation ring to the tip of the heating element.
Tighten the screws after covering the heating element with the heater pipe.



⚠ CAUTION

- Be sure not to forget to attach the insulation ring.
- Make sure that a new mica and insulation fiber are inserted evenly into the heater pipe.

日本文

中文

English