



HAKKO FR-801

SMD REWORK STATION

SMDリワークステーション
扁平集成电路拔放臺
SMD Rework Station

温度分布表 温度分布圖表 TEMPERATURE DISTRIBUTION CHART

注意

- グラフは参考用値であり、規格値ではありません。
- サーマルプロテクターが働く場合は温度設定を下げるか、風量を上げるように調節してください。
- FR-801をご使用の際にはノズル別温度分布表を参考にしてください。
- FR-801はハッコー850及びハッコー850Bとは異なります。よって、温度分布表も異なりますので、ご注意ください。

- 測定条件：ノズル先端より1mmの位置で記録計により測定。
- () 内は温度特性同等品です。

注意

- 温度分布圖表使用于参考，并不是規格值。
- 熱度保護器起動時，請將溫度降低或將風量提高以做調節。
- 使用FR-801時，請參考不同噴嘴的溫度分布圖表。
- FR-801与HAKKO 850及850B不同，溫度分布圖表也不同，請注意。

- 測量條件：距離噴氣嘴3毫米處測量。
- 噴嘴番号下面的()内，是溫度特性的同等品。

CAUTION

- These charts do not define the temperature characteristics, and are for reference only. If the thermal protector trips, reduce the temperature setting or increase the air flow.
- The temperature distribution charts for HAKKO 850 or 850B should not be used for FR-801. FR-801 uses a different pump and control system. When you use the FR-801, make sure to refer to the temperature distribution charts shown to the right.

- Test condition: Measured at a point 1mm (0.04 in.) from the nozzle by recorder.
- Nozzles of which part names are parenthesized have equivalent temperature characteristics.



白光株式会社

<http://www.hakko.com>

〒556-0024 大阪市浪速区塩草2丁目4番5号
TEL: (06) 6561-1574 (代) FAX: (06) 6568-0821



HAKKO CORPORATION

HEAD OFFICE

TEL: +81-6-6561-3225 FAX: +81-6-6561-8486

<http://www.hakko.com> E-mail: sales@hakko.com

OVERSEAS AFFILIATES

U.S.A.: AMERICAN HAKKO PRODUCTS, INC.

TEL: (861) 284-0060 FAX: (861) 294-0066

Toll Free (800)88-11450

<http://www.hakko.com>

HONG KONG: HAKKO DEVELOPMENT CO., LTD.

TEL: 2611-6568 FAX: 2690-0217

<http://www.hakko.com.hk>

E-mail: info@hakko.com.hk

SINGAPORE: HAKKO PRODUCTS PTE., LTD.

TEL: 6748-2277 FAX: 6744-0033

<http://www.hakko.com.sg>

E-mail: sales@hakko.com.sg

Please access to the following address for the other Sales affiliates.

<http://www.hakko.com>


Copyright © 2006 HAKKO Corporation. All Rights Reserved.

NO.1

A1124B

(A1142B)


温度/溫度/Temp.

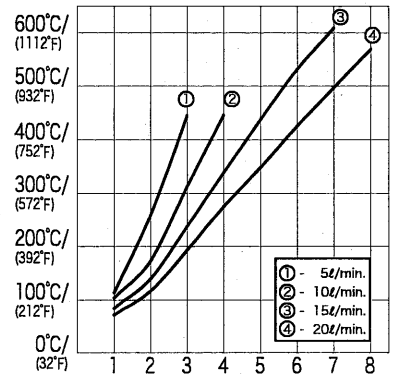

温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1128B

温度/溫度/Temp.

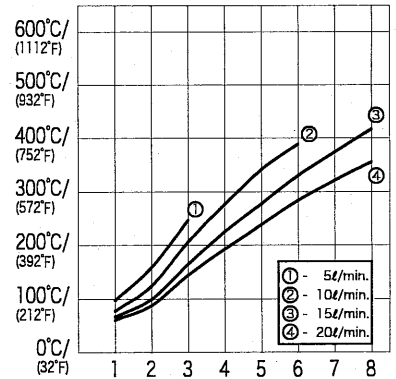


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1257B

(A1184B, A1186B, A1188B, A1214B,
A1259B, A1260B, A1133, A1134, A1191,
A1325)


温度/溫度/Temp.

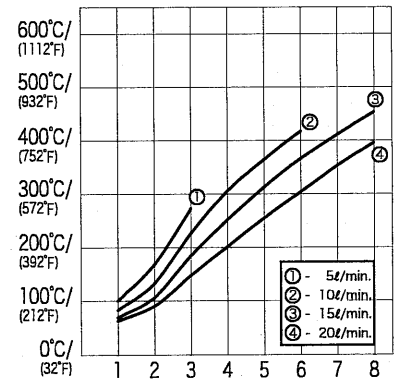

温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1125B
(A1139B)


温度/溫度/Temp.

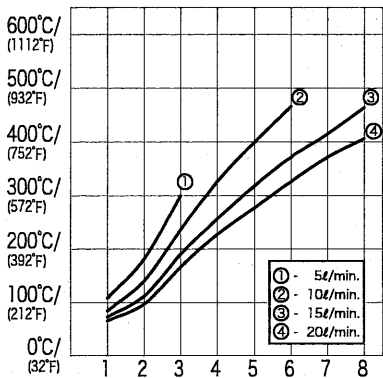

温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1126B
(A1180B)

温度/溫度/Temp.

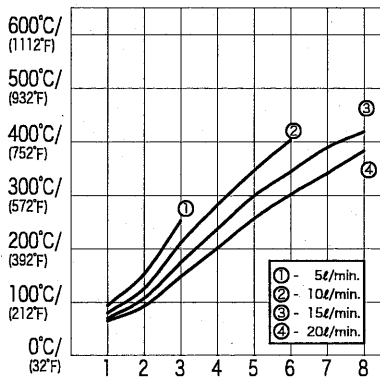


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1127B

(A1135B, A1136B, A1181B)

温度/溫度/Temp.

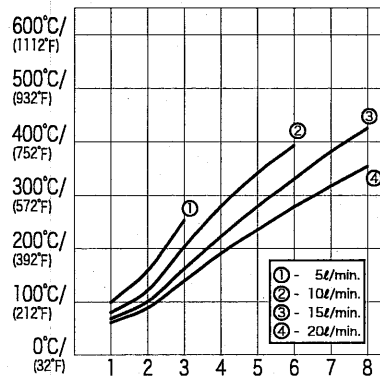


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1129B

(A1138B, A1265B)


温度/溫度/Temp.

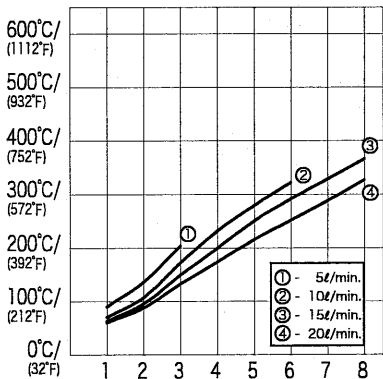

温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1130

温度/溫度/Temp.

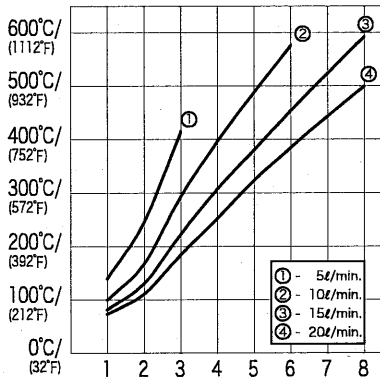


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1131

(A1132, A1183, A1190, A1185B, A1187B, A1258B)

温度/溫度/Temp.

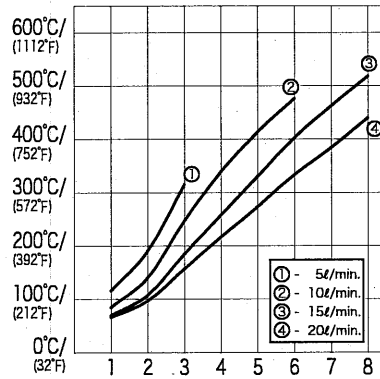


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1261B

(A1137B, A1182B, A1192)

温度/溫度/Temp.

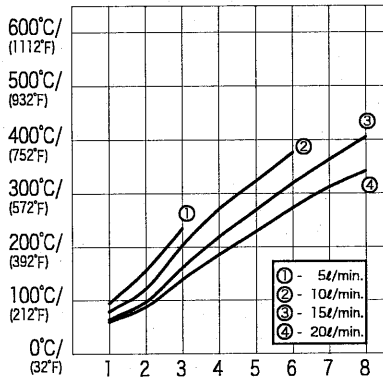


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1262B

(A1140B, A1141B)

温度/溫度/Temp.

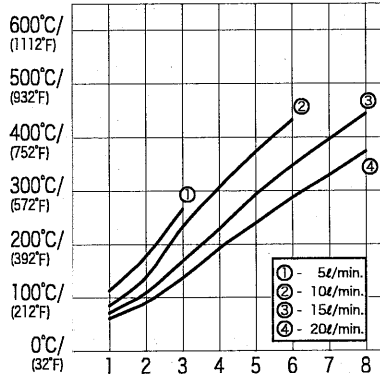


温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

A1264B

(A1189B, A1203B, A1215B, A1263B)

温度/溫度/Temp.

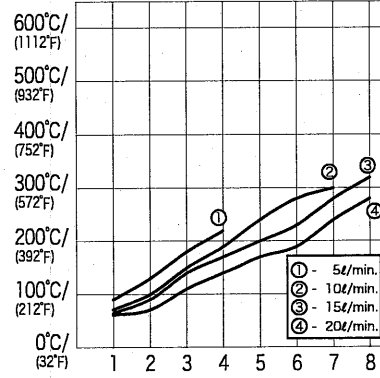

温度調整目盛/溫度調節旋鈕/
Temperature Control Knob

2006.3
MA01492JZ0663/0